

When choosing the screw and screw plug take into account the material of the wall or ceiling. If you are unsure, please contact a specialist.

Mounting instructions for a ceiling or a wall:

1. The maximum distance between fixplates when mounting a paneltrack with cord control is 80 centimeters. For a panel track without cord control the maximum distance between fixplates is 100 centimeters. There must always be a fixplate at the ends of the railprofiles.

a.



When mounting to the ceiling, attach the fix plates directly to the ceiling. The fixplates must always be attached from both ends.



b.



When mounting to the wall, attach wall mounting brackets to the wall.




- i. Attach a bracket extension piece to the fixplate with short screws. At this stage of the assembly railprofiles are attached to the fixplates (pictures without profiles).

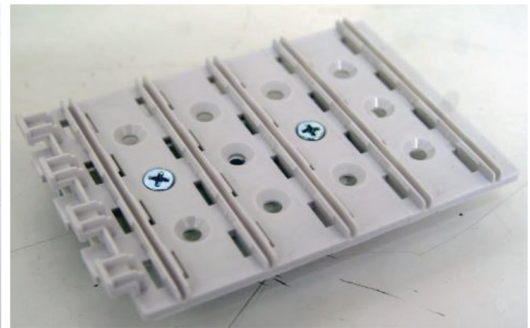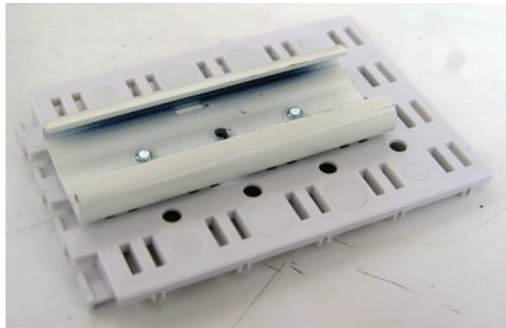

- ii. Place the fixplate with the bracket extension piece to the wall mounting bracket and tighten the fixplate to the bracket with one longer screw from the middle.




- iii. Below are pictures of a paneltrack mounted as close and as far as possible from a wall.

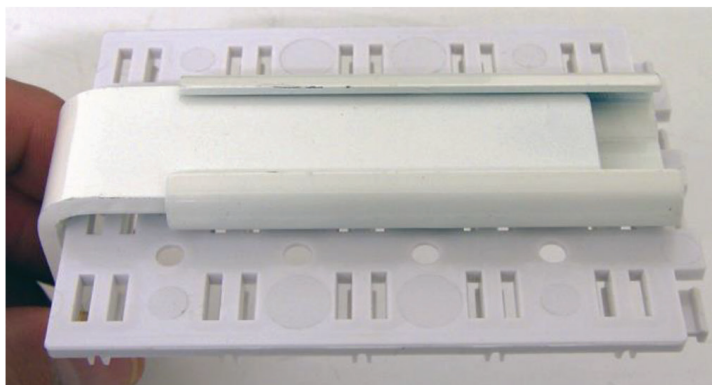

As close as possible.



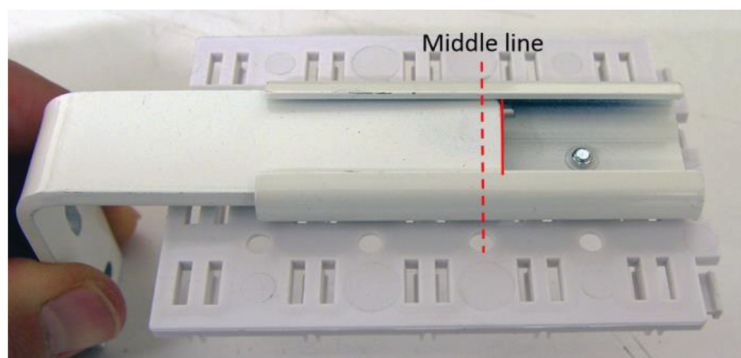

As far as possible. Note that wall mounting bracket is recommended to be always over the middle line of the bracket extension piece (see picture above).

2. Fix the panels to the panel system.

a.



Start putting the panels in place from the railprofile next to the wall.




b.



First push the pin on the slider in to the bigger hole of the panel holder plug. After that push the panel towards the slider. There should be a snap, when the pin of the slider clicks in to the panel holder plug correctly. The folded ends of the fabric should be on the reverse side of the completed product.

c.

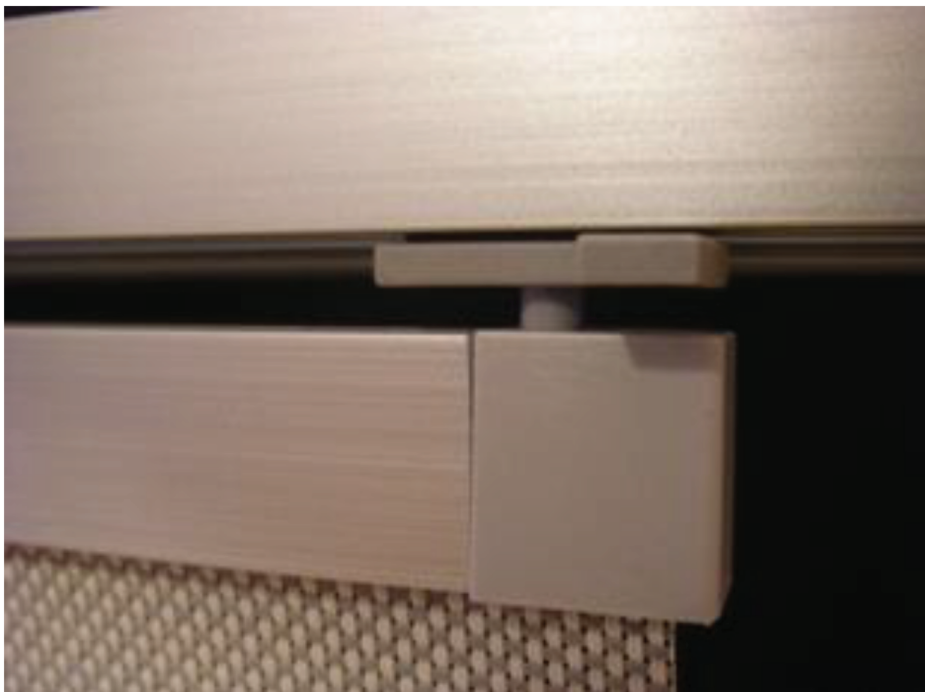

In the picture above a panel is attached to the panel system. Fix also the other panels to the panel system.



3.



Push the cover profile to its place.

