

- MEASURING GUIDELINES -

Inside Mount or Outside Mount?

Inside (IB) Mount — Shade fits within the window frame.

Outside (OB) Mount — Shade overlaps the window opening.

Be sure to add the desired overlap amount to each side of the shade and then add to the total ordered width when ordering an outside mount shade.

Standard Measuring Procedures

Inside (IB) Mount

- Be sure the window opening is deep enough to install the mounting bracket. Refer to the mounting specifications for each product.
- Measure the width inside the window opening at the top, middle and bottom. The top measurement should always be the ordered width. Shades by Matiss will make the necessary deductions.
- Measure the height inside the window opening at the left, center and right.
- The ordered width should ensure a precise fit for the headrail and allow proper operation of the shade.
- If widths in the window vary, order the minimum width necessary to allow the shade to go up and down.
- The ordered height should ensure clean operation at the base of the window, as well as provide maximum privacy and light control. If heights in the window vary, order the shortest height for vertical treatments and the longest height for horizontal treatments.



Note: Roller Shade fabrics will be fabricated narrower than your ordered width to allow for the hardware. If concerned over resulting light gaps, consider ordering a blackout system or choose an outside mount application.

Outside (OB) Mount


- Measure the desired width and height that you wish to cover. To minimize light leakage, the shade should overlap the window opening on each side and at the bottom. This is your ordering width and will be the overall measurement bracket to bracket.
- When measuring the height, take into account the requirements for mounting the bracket attachment.

Note: Roller Shade fabrics will be narrower than the measurement you provide to allow for the hardware. Refer to the deductions and specifications for each selected product to determine proper overlap to be added to the desired fabric width and this will be your ordering width.

Refer to Deductions Charts for specific shade application deductions

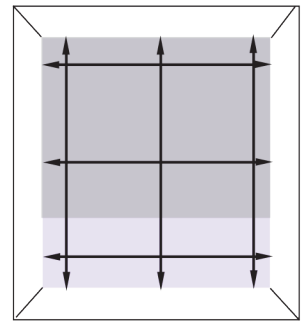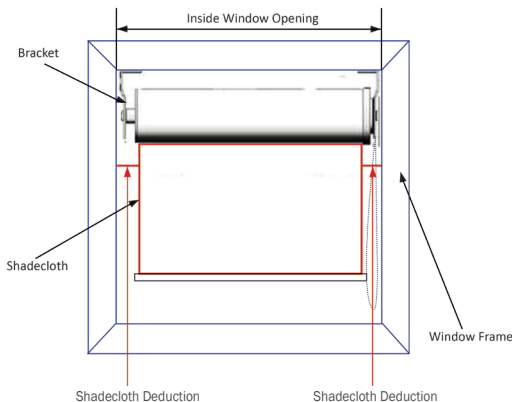

Inside Mount

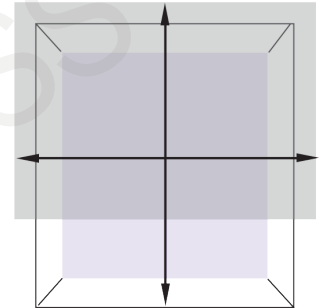

Outside Mount

